Universal Remote

Model: ONB13AV004

PRODUCT GUIDE

Table of Contents

Introduction 2
Battery Installation 3
    Care and Maintenance 3
Button Functions 4
Programming Your Remote 6
    Direct Code Entry 6
    Auto Code Search 8
    Controlling Combo Devices 9
Master Volume Feature 10
Reset to Factory Settings 11
Troubleshooting 12
FCC Statement 13
Remote Code Section 14

Congratulations on your purchase of the ONN Universal Remote. This remote is capable of operating thousands of audio/video devices including TVs, DVD players, cable, satellite receivers, and more!

IMPORTANT:
SAVE THIS MANUAL AND CODE LIST FOR FUTURE REFERENCE

QR Code

Scan the QR code to view our helpful demonstration video for programming your ONN remote.

Scan this to view remote setup video

Mira a ver el video de instalación remota

http://www.myonnremote.com

Battery Installation

Your universal remote requires two (2) AAA Alkaline batteries (not included).

To Install the Batteries:

1. Remove the battery compartment cover by sliding the cover down.
2. Match the (+) and (-) marks on the batteries to the (+) and (-) marks inside the battery compartment, then insert two (2) AAA Alkaline batteries. Be sure to use fresh batteries.
3. Slide the battery compartment cover back into place.

Note: *If your remote stops operating properly, replace the batteries with new ones. The remote will retain the codes you have programmed for up to 10 minutes after the batteries are removed.*

Battery Precautions:

- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (Ni-Cd, Ni-MH, etc.) batteries.
- Always remove old, weak or worn-out batteries promptly and recycle or dispose of them in accordance with local and national regulations.

Care and Maintenance

- Keep the remote away from moisture. If it gets wet, dry it immediately.
- Use and store the remote at normal household temperatures.
- Use a soft, damp cloth to clean the remote.
- If the remote is not going to be used for a long period of time, remove the batteries from the remote.
- Handle the remote with care.

Button Functions

TV, CBL/SAT, DVD/ VCR, AUX Selects the device to control.

Red Indicator Light when any button is pressed.

ON•OFF Turns the device On or Off.

EXIT Exits On-Screen Menus.

MUTE Turns off the TV sound while the picture remains. In **SHIFT** mode **OK** Selects menu items for the device you are controlling.

INPUT Selects the video inputs from available viewing sources.

NUMBERS Enter numbers for direct channel selection.

DOT: Used to select digital channels, for example: 4.1, 9.2.

RECORD, PLAY STOP, REWIND, FAST FORWARD, PAUSE

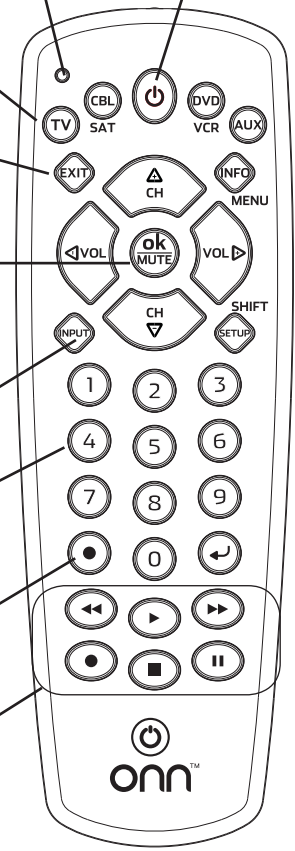

Button Functions, cont.

INFO displays/selects on-screen channel information, etc.

MENU displays the Menu on the TV and other devices. Use the **SHIFT** button to access this feature.

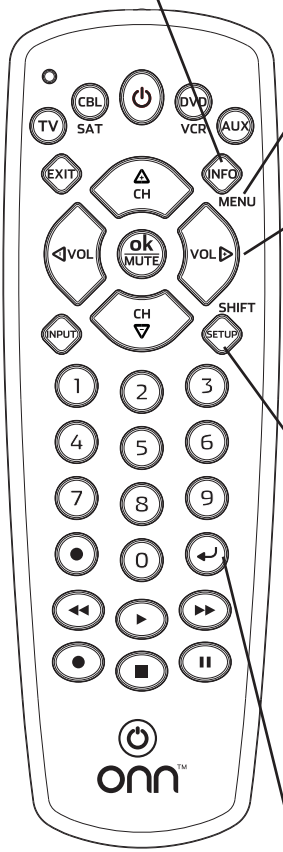

VOLUME UP/DOWN
Changes the volume level of the device, normally the TV.
CHANNEL UP/DOWN
Changes the channels. In **SHIFT** mode, these buttons navigate on-screen cursors and are used to make selections.

SETUP button is used to program the remote. **SHIFT** is the alternative function of this button. Use the **SHIFT** button to access the Menu and Navigation functions of your device. To enter the **SHIFT** mode press this button once. To exit the shift mode, press the **SHIFT** button again.
NOTE: The red indicator light will blink when the remote is in SHIFT mode.

ENTER
For some TV models, the ENTER button is used after a channel number is entered to immediately change to the selected channel.

Programming Your Remote

Your ONN universal remote control is designed to control up to 4 different audio/video devices such as TV, DVD, VCR, satellite, cable and audio using only one remote. To use this remote, you will need to program it to control the devices of your choice. There are two ways to program the remote - direct code entry or auto code search.

Direct Code Entry (Recommended)

1. Locate the Remote Code List provided in this manual. Find the **DEVICE CATEGORY** you wish to program (for example **TV, DVD, SAT, AUX**) and then find the **BRAND** of that device. Circle all the codes under that brand. Example: For a GE TV, locate the TV code section then circle all of the GE TV codes.
2. Manually turn on the device you wish to control.
3. Press and hold the **SETUP** button until the red indicator light stays on (approximately 2 seconds) and then release the **SETUP** button.

4. Press and release the desired device button on the remote (**TV, DVD, SAT, AUX**). The red indicator will blink once and then remain on.

5. Enter the first 4-digit code previously found in the code list using the number buttons on the remote. If the code entered is a valid code, the red indicator light will turn off. If the code entered is not a valid code, the red indicator light will flash and remain on allowing you to re-enter the code.

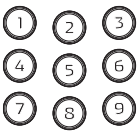

Note: *If no buttons are pressed for 35 seconds, the remote will exit the SETUP mode and you will have to*

start over.

6. Point the remote at the device. Press the **POWER** button—if the device turns off, no further programming is required for that device. If the device does not turn off, return to step 3 and use the next code found in the code list. Continue this process until a code for your device is found.

To view a helpful demonstration video for programming your ONN remote, see QR code on page 2 of this manual.

Programming Notes

- If your device does not respond to the remote after trying all codes listed or your brand is not listed in the code list, use the Auto Code Search method to program your remote.
- Sometimes the first code that "works" with your device may operate only a few functions of your device. There may be another code in the code list that performs more functions. Try other codes from the code list for more functionality.
- You can use any device button to control other devices in your home entertainment system. For example, you can use the **AUX** device button to control an audio receiver or a DVD, VCR, satellite, etc.
- For combination devices, you may have to enter a code for each device. For example, for a VCR/DVD device, you may have to enter a code for the DVD under the **DVD** button and enter a code for the VCR using a different device button on the remote.
- Write down the code found to operate your device for future reference.

Auto Code Search

The Auto Code Search searches automatically through all of the codes stored in this remote. Read all the following steps prior to starting the auto search as you will need to be prepared to lock-in the proper code when found.

1. Manually turn on the device you wish to control.

2. Press and hold the **SETUP** button until the red indicator light stays on (approximately 4 seconds) and then release the button.

3. Press and release the desired device button on the remote (**TV, DVD, SAT, AUX**). The red indicator will blink once and then remain on.

4. Point the remote at the device and press and release the **POWER** button (for TV) or **PLAY** button (for DVD, VCR, etc.) to start the search. The red indicator will flash (approximately every 2 seconds) as the remote searches. ***Note:*** *The remote must be pointed at the device for the duration of this search.*

5. Place your finger on the **#1** button so you are prepared to lock-in the code.

6. When the device shuts off or begins playing, press the **#1** button to lock-in the code. The red indicator light will turn off. ***Note:*** *You have approximately two seconds after the device shuts off or begins playing to lock-in the code.*
7. Point the remote at the device and check to see if the remote operates the device as desired. If it does, no further programming is required for that device. If it does not, return to step 2 and start the auto search.

Programming Your Remote

To view a helpful demonstration video for programming your ONN remote, see QR code on page 2 of this manual.

Programming Notes

- This process may take several minutes as the remote contains many codes.
- The **SETUP** button can be used during the search process to reverse the direction of the search of the remote codes. For example, if you miss the code for your device and the remote is continuing to search (as indicated by the blinking red light), press the **SETUP** button and the code search will reverse direction and return to the code.
- When using the Auto Code Search programming method, the device button corresponding to the type of device you want to control must be selected (for example, the **TV** device button must be selected in step 3 if you want to control a TV, the **DVD/VCR** device button for a DVD player, etc.)
- Sometimes the first code that "works" with your device may operate only a few functions of your device. There may be another code in the code list that performs more functions. Continue the code search as directed above until the best code is found.

Controlling Combo Devices

Some Combo devices (e.g. TV/VCR, TV/DVD, DVD/VCR, etc.) will require you to setup up two different Mode buttons to control both parts of the Combo device. For example, if you have a TV/DVD Combo, you might need to set up one code under the **TV** button to control the TV part AND a separate code (under any other Mode button) to control the DVD part.

Master Volume Feature
The Master Volume Feature allows you to select a single device (TV or audio receiver) that the volume control always controls. For example, the remote can be in TV mode while the volume buttons control the volume on your audio receiver instead of your TV.

Enabling the Master Volume Feature

1. Press and hold the **SETUP** button until the red indicator stays on (approximately 4 seconds) and then release the button.

2. Press and release desired device button (**TV, DVD, SAT, AUX**) for the device you wish to setup to control the volume.

3. Press and release the **MUTE** button.

4. Press and release the **VOL +** button. The red indicator will blink twice and then go off.

To test the feature put the remote in another mode such as the TV mode if you programmed the audio receiver to be the Master Volume Device. Point the remote at the audio receiver, press and hold either the **VOL +** or the **VOL -** button. If the audio receiver volume changes then the remote is programmed correctly. If the TV volume changes and not the audio receiver, you will have to repeat the steps above and test again.

Disabling the Master Volume Feature

1. Press and hold the **SETUP** button until the red indicator stays on (approximately 4 seconds) and then release the button.

Master Volume Feature, cont.

2. Press and release the device button (**TV, DVD, SAT, AUX**) which is programmed to control the Master Volume Feature.

3. Press and release the **MUTE** button.

4. Press and release the **VOL - button**. The red indicator light will blink twice and go off.

To make sure the Master Volume Feature is disabled, put the remote in TV mode if you programmed the audio receiver to be the Master Volume Device. Point the remote at the TV and press a volume button. If the volume changes on the TV, the feature is disabled. If the volume on the audio receiver changes, and not the TV, you will have to repeat the steps above and test again.

Reset to Factory Settings

1. Press and hold the **SETUP** button until the red indicator stays on (approximately 4 seconds) and then release the button.

2. Press and release the **OK** button.

3. Press and release the number **#0** button. The red indicator light will flash twice.

Troubleshooting

Remote does not operate your device.

- Make sure the batteries are fresh and installed correctly.
- Aim the remote directly at your device, and make sure that there are no obstructions between the remote and device.
- Make sure you select the appropriate device on the remote you wish to control, for example, TV for TV, DVD for DVD, etc.
- Try programming the remote with a different code. See Direct Code Entry section.
- Remote may not be compatible with your device.

Remote does not operate some features of your device.

- Sometimes a particular code might operate a few features but not all. Try programming remote with a different code from the code list. See Direct Code Entry section.
- Remote may not be able to operate all features of your device or button names may be different than that of your original remotes.

Remote Code is not available for a combo device (e.g. TV/VCR, TV/DVD)

- Some Combo devices (e.g. TV/VCR, TV/DVD, DVD/VCR, etc.) will require you to set up two different Mode buttons to control both parts of the Combo device. For example, if you have a TV/DVD Combo, you might need to set up one code under the TV button to control the TV part AND a separate code (under any other Mode button) to control the DVD part.

BEFORE YOU RETURN THIS PRODUCT TO THE STORE, PLEASE VISIT THE WEBSITE www.myOnnRemote.com FOR FURTHER ASSISTANCE; Or, contact us at 1-800-654-8483 between 7:30AM—5:00PM CST.

FCC Statement

FCC Statement
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.
However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Distributed by Wal-Mart Stores, Inc.
Bentonville, AR 72716
MADE IN CHINA

Code List – Lista de Códigos

TV

Abex 0401, 4021
Acer 3291, 4001
Acme 0471
ADA 0461
ADC 1431, 1661
Admiral 0371, 0681, 1441, 1661, 4991
Advent 3261, 0581
....0631, 0871, 2131, 2891, 4931
Adventura 0151
Aiko 1011, 4321
Aiwa 0411
....0651, 0931, 1411, 4731, 4801
Akai 3215
....3111, 0331, 0351, 0781, 1901
....4141, 4151, 4461, 5141, 5171
Alleron 1711
Amark 1441
Ames 1275
Amtron 2191
AMW 0645, 0825
ANABA 1375
Anam National 0271
....1941, 2151, 2191, 2331, 3431
AOC 0001, 0011, 0251, 0391
....0611, 0891, 1221, 4221, 4261
Apex 0045, 0191, 0245
....0375, 0425, 0431, 0671, 1025
....1105, 1891, 2911, 4841, 5111
Archer 1441
Aspect 1271
Audiovox 2191, 2451, 4031, 4051, 4521
Aurora 3061
Axion 0881
Bang&Olufsen 1591
Belcor 0001
Bell&Howell 1261, 1421, 1661, 1691, 3421
BenQ 1741, 1761, 2221, 3871
Bluesky 3511, 3921
Bradford 2191
Broksonic 0211, 0371, 0851, 1631, 4951
Brokwood 0001
Candle 0001, 0151, 0961, 1221
Capehart 0391, 4221
CCE 3721
Celebrity 1901
Celera 0191
Centrios 1361
Centurion 1221
Cetomer 0001, 1631, 2901, 2961
Cetronic 1941
Changhong 0191, 1891, 4841
Chimei 3071
Cineral 3511, 4321
Citizen 0001, 0351
....0371, 0961, 1011, 1221, 1311
....1381, 1661, 1941, 2191, 4321
Clairtone 0011
Classic 0191, 1891, 1941, 4841
CLP 0061
CLP Classic 0001, 0041, 0161
COBY 3351, 2511, 2521
....2531, 2541, 2551, 5091, 5191
Color voice 1431
Coloryme 0001, 1221, 1431
Concerto 0001, 1221
Concierge 1771, 1781
Contec 0011, 1911, 1941, 2191
Cornea 1471
Craig 1941, 2191
Crosley 1961
Crown 1941, 2191
CTX 1441
Curtis Mathes 5351
....5371, 0001, 0261, 0351, 1191
....1221, 1261, 1311, 1421, 1551
....1661, 1691, 3421, 4011, 4941
CXC 1941, 2191
Cybervision 3511
Daewoo 0001
....0221, 0251, 0591, 0721, 0831
....0971, 1011, 1081, 1221, 1231
....1251, 1431, 1501, 1521, 1551
....1561, 1941, 2181, 4321, 4681
Daytron 0001, 1221
Dell 0981
....1401, 2041, 3441, 3601, 3811
Diamond Vision 1211
....1611, 2001, 4771, 4811
Digimate 4301
Digistar 0381, 0581, 0871, 1061
....2451, 2471, 3811, 3881, 3901
Dimensia 1421, 1691, 3421
Dish Network 5491
Disney 0371, 1101
Distar 3231
Dukane 1271, 1981
Dumont 0001, 1771, 1781
Durabrand 0371, 0861
....0921, 1381, 2271, 2291, 5121
Dynasty 1941
Dynex 5311, 3141, 3161, 0371, 2891
Electroband 0001, 1901
Electrohome 0001, 1221, 1921, 2151, 3431
Elektra 1661
Element 5361, 5411, 2401, 4111
Elite Video 0901
Emerson 5341, 2761, 5221, 5231, 0001
....0021, 0031, 0041, 0271, 0281
....0291, 0371, 0441, 0451, 0691
....0701, 0731, 0741, 0851, 0931
....1221, 1251, 1261, 1371, 1381
....1451, 1461, 1551, 1611, 1631
....1681, 1701, 1711, 1931, 1941
....2171, 2191, 2361, 3451, 4701
....4731, 4751, 4761, 4831, 4911
Envision 5401
....0001, 0071, 1221, 3751, 4261
ESA 1381
Fisher 1161, 1261
....1531, 1581, 1911, 3481, 5001
Fluid 2401, 2421, 2431
Fujitsu 0901, 1711, 4241, 4341
Funai 0701, 0931, 1381
....1711, 1941, 2191, 4731, 4761
Futuretec 1941, 2191
Gateway 0501
GE 0001, 0041, 0051, 0141
....0261, 0361, 0791, 0811, 1221
....1421, 1691, 1921, 1951, 2111
....2151, 3421, 3431, 4011, 4921
Gibralter 0001, 1771, 1781
Gold Star 0001, 0251, 0611, 0761, 0931
....1181, 1221, 1501, 1911, 4731
GPX 4701
Gradiente 0001, 2291, 3661, 3951, 3961
Grundy 1711, 2191
Guestvision 1861
Gvision 4871
Haier 0671
....0861, 0921, 1741, 3831, 4851
Hallmark 0001, 1221
Hannspree 5451, 5461, 5291
Harvard 2191
Hauppauge 3791
Hello Kitty 5391
HP 3491, 4881
Hisense 5331, 4671, 0671
....2081, 2211, 3671, 4381, 4391
Hitachi 3341
....0001, 0841, 0931, 1041, 1221
....1271, 1341, 1371, 1481, 1661
....1721, 1751, 1801, 1911, 1981
....2051, 3621, 4121, 4331, 4731
Hyundai 4651
ILO 3215
....1141, 1381, 1971, 2391, 2481
....3691, 4231, 5031, 5141, 5171
IMA 2191
Infinity 1171, 1961, 4791
InFocus 3421
Initial 2481, 4231, 4821, 5031, 5041
Insignia 0371, 0581, 0701, 0871
....0921, 1241, 1381, 2241, 2271
....2891, 2921, 3761, 3841, 4371
....4721, 4761, 5051, 5061, 5181
Integra 1841
Inteq 1771, 1781
ISymphony 3041
Janeil 0151

Code List – Lista de Códigos

JBL 1961
JC Penney 0001, 0051, 0251, 0261
..... 0351, 0791, 0811, 0961, 1221
..... 1311, 1421, 1451, 1691, 1911
..... 1921, 1951, 3421, 3451, 4011
JCB 1901
Jensen 0001, 1221, 2271
JVC 5281, 0311, 0481, 0771, 0901
..... 0941, 1281, 1481, 1801, 1911
..... 2381, 2751, 4121, 4201, 5071
Kawasaki 4741
Kawasho 0001, 1221, 1901
Kaypani 0391, 4221
KEC 2191, 1941
Kenwood 0001, 1221
KLH 0191
Kloss Novabeam 0151, 1021
Kogi 4871
Konka 5441, 0471, 0521
..... 0751, 1241, 1671, 2121, 2191
..... 2241, 2371, 4621, 4901, 4971
KTV 0011, 1491, 1681, 1941, 2191
Kurazai 1661
KWorld 2931
Lasonic 1211, 1611, 4811
Legend 0581
LG 5501, 5511
..... 3001, 3021, 3091, 3221, 3281
..... 3311, 5271, 0001, 0131, 0251
..... 0611, 0761, 0931, 1181, 1221
..... 1471, 1501, 1911, 3811, 4731
Liquidvideo 0881, 1111
Lodgenet 1421
..... 1661, 1691, 2091, 3421, 4091
Loewe 1871, 1961
Logik 1421, 1661, 1691, 3421
Luce 0301
Luxman 0001, 1221
Lxi 0001, 0261, 0811
..... 0931, 1221, 1261, 1311, 1421
..... 1691, 1961, 3421, 4011, 4731
Magnasonic 1711
Magnavox 0001
..... 0321, 0681, 0701, 0961, 1021
..... 1171, 1221, 1801, 1961, 2321
..... 4191, 4641, 4761, 4791, 4991
Majestic 1421, 1661, 1691, 3421
Manhattan 5381
Marantz 0001, 1221, 1841, 1961
Maxent 3361, 0501
Medion 1101, 1141, 2351
Megatron 0001, 1221, 1271
Mei 0011
Memorex 0001, 0211, 0371, 1161, 1221
..... 1261, 1421, 1631, 1661, 1691
..... 1711, 2401, 3421, 4251, 5001
MGA 0001, 0251, 1221
..... 1581, 1711, 1801, 1911, 1921
Midland 0051, 0261
..... 0811, 1691, 1771, 1781, 4011
Mintek 4231
Minutz 1951
Misakai 1381
Mitsubishi 3271, 0001, 0251, 1221, 1581
..... 1711, 1801, 1811, 1921, 2701
Monivision 0491
Montgomery Ward ... 1421, 1661, 1691, 3421
Moteva 1261, 3661
Motorola 1441, 2151, 3431
MTC 0001
..... 0011, 0251, 0351, 1221, 1311
Multitech 2191
Multivision 0081
Myron&Davis 2101
NAD 0001, 0401, 1221, 1311, 4021
NEC 0001, 0251, 0341, 1221, 1431
..... 1801, 1841, 2151, 3431, 4401
Net TV 0121, 0501
Nexxtech 0871, 1201
Nikei 1941
Nikko 0001, 1011, 1221, 4321
Niko 3581
Norcent 0511, 0671, 2181
NTC 1011, 4321
Olevia 3081, 2431
..... 2771, 2781, 2791, 5151, 5161
Oncommand 1861, 3991
Onking 1941
Onkyo 3101
Onwa 1941, 2191
Optimus 0201, 0401, 1571
..... 1881, 3551, 4021, 4691, 5201
Optoma 3121, 2441
Optonica 0341, 1441
Orion 0281, 0371, 1771, 1781
Panasonic National 5481, 3381, 3401
..... 0051, 0201, 0951, 1091, 1491
..... 1571, 1651, 1831, 1881, 1961
..... 2151, 2711, 2801, 3431, 3551
..... 3771, 4691, 4781, 4861, 5201
Philco 0001, 0251, 0321, 0961
..... 1021, 1221, 1671, 1801, 1961
..... 2151, 2321, 2941, 3431, 3931
Philips 3031, 3131, 3151
..... 3171, 3371, 3391, 0181, 0001
..... 0161, 0321, 0421, 0541, 0661
..... 0701, 0791, 0911, 0961, 1021
..... 1151, 1171, 1381, 1391, 1601
..... 1741, 1801, 1961, 2151, 2321
..... 3431, 3541, 3591, 3861, 3911
..... 3971, 3981, 4191, 4761, 4791
Philips Magnavox 0181, 0681, 0911, 1171
..... 1961, 2321, 3591, 4791, 4991
Pilot 0001
Pioneer 0001, 0401, 1221, 1371
..... 1511, 1841, 1981, 4021, 4661
PIVA 2411, 5021
Planar 4251
Polaroid 0191
..... 0581, 1241, 2081, 2271, 2311
..... 2401, 2451, 3741, 4631, 5131
Portland 0001
..... 0251, 1011, 1081, 1221, 1551
Precision 0621
Price Club 0351
Prima 3011
..... 0381, 0581, 0631, 0871, 2451
Princeton Graphics 1301, 1441
Prism 0051
Proscan 0261, 0811, 1421
..... 1691, 2061, 2301, 3421, 4011
Proton 0001, 0391, 0641, 1221
..... 1911, 2231, 4211, 4221, 4271
Protron 3731, 4301
Proview 2401, 2421, 2431
Pulsar 0001, 1771, 1781
Pyle 3331
Quasar 0051, 0201, 1091
..... 1491, 1571, 1831, 1881, 1961
..... 2151, 3431, 3551, 4691, 5201
Radio Shack 0001, 0141, 0341, 0931
..... 1001, 1221, 1261, 1421, 1571
..... 1691, 1701, 1911, 1941, 2111
..... 2191, 3421, 3551, 4731, 4921
RCA 0001, 0051, 0091
..... 0141, 0251, 0261, 0361, 0551
..... 0811, 0891, 1001, 1131, 1221
..... 1331, 1371, 1421, 1521, 1691
..... 1851, 1921, 2011, 2061, 2111
..... 2151, 2251, 2301, 2851, 2951
..... 3421, 3431, 3571, 4011, 4921
Realistic 0001, 0141
..... 0341, 0931, 1001, 1221, 1261
..... 1421, 1571, 1691, 1701, 1911
..... 1941, 2191, 3421, 3551, 4731
Rhapsody 0011
Runco 1771, 1781, 1841
Sampo 0001, 0121
..... 0391, 0501, 1221, 1911, 4221
Samsung 5471, 5521, 3301, 3321
..... 2741, 2961, 0331, 0001, 0101
..... 0251, 0261, 0351, 0531, 0571
..... 0711, 0781, 1191, 1221, 1311
..... 1501, 1911, 2071, 2141, 2721
..... 3471, 3561, 4011, 4941, 4961
Samsux 1221
Samtron 0351
Sansui 5551, 0211, 0371, 1631
Santeca 0171
Sanyo 2981, 2991, 3051

Code List – Lista de Códigos

.....5251, 2871, 5241, 5261, 0001
.....0801, 1051, 1161, 1261, 1531
.....1581, 1911, 2881, 3481, 5001
Sceptre.....3521, 4071, 5111
Scotch.....0001, 1221
Scott.....3215, 0001, 0021, 0281
.....1221, 1711, 1941, 2191, 5141
Sears.....0001, 0211, 0261
.....0351, 0701, 0811, 1221, 1261
.....1291, 1311, 1381, 1421, 1531
.....1581, 1691, 1711, 1911, 1961
.....2021, 3421, 3481, 4011, 4761
Selectron.....2471, 2491, 2501
Semp.....3611
Sharp.....5421, 3181, 3191, 3201
.....2731, 0001, 0341, 0461, 0681
.....0691, 1221, 1291, 1441, 2031
.....2201, 2261, 3461, 4751, 4991
Shogun.....0001
Signature.....1421, 1661, 1691, 2171, 3421
Signet.....2811, 2821, 2861
Simpson.....0961
Sonic.....0011
Sony.....5321
.....1071, 1641, 1731, 1901, 2161
.....2741, 3531, 3891, 4101, 4981
Soundesign.....0001
.....0961, 1221, 1711, 1941, 2191
Sova.....3631, 4431
Soyo.....4611, 5101
Spectra.....1611
Spectravision.....2341
Squareview.....1381
SSS.....0001, 1941, 2191
Star Sight.....0061
Starlite.....2191
Superscan.....0701, 1291, 2021, 4761
Supersonic.....0241, 4701
Supra.....0001, 1991
Supremacy.....0151
Supreme.....1901
SVA.....0671, 2101
Sylvania.....0001, 0321
.....0371, 0701, 0931, 0961, 1021
.....1221, 1381, 1801, 1821, 1961
.....2321, 2761, 3701, 4731, 4761
Symphonic.....0021, 0701
.....0931, 1381, 2191, 4731, 4761
Syntax.....2431, 5151, 5161
Tandy.....1441
Tatung.....1141, 1741, 2151, 3431
TCL.....2851, 0091, 1421
.....1691, 1851, 2011, 2061, 2111
.....2301, 3421, 3431, 3571, 4921
Technics.....0051
Techwood.....0001, 0051, 1221
Teknika.....0001, 0151, 0251
.....0351, 0961, 1011, 1221, 1311
.....1421, 1571, 1661, 1691, 1711
.....1911, 1941, 2191, 3421, 3551
Telecaption.....0821
Telerent.....1421, 1661, 1691, 3421
Tera.....0001, 0641
Tevion.....1141
TMK.....0001, 1221
Toshiba.....5531, 3211, 1311
.....0211, 0231, 0341, 0351, 0821
.....1121, 1191, 1261, 1351, 1541
.....1571, 1621, 1801, 1841, 1911
.....2691, 3551, 4891, 4941, 5081
Trutech.....2461, 3821, 4551
Universal.....0791, 1951
Venturer.....3781
Victor.....1481, 4121
Videocon.....4061
Vidtech.....0001, 0251, 1221
View Sonic.....5301
.....0501, 1981, 3751, 3801, 4281
Viking.....0151
Viore.....5431, 2831, 2841, 3681
Visteon.....3411
Vizio.....5561, 5571, 5581, 5591
.....5601, 5611, 5621, 5631, 5641
.....5651, 5661, 5671, 5681, 5691
.....5701, 5711, 2901, 1471, 1741
.....2021, 3651, 3741, 3851, 4081
Wards.....0001, 0021
.....0251, 0321, 0341, 0791, 0961
.....1021, 1221, 1321, 1421, 1661
.....1691, 1711, 1951, 1961, 3421
Westinghouse.....3241, 3251
.....0111, 1901, 2281, 3711, 3851
White-Westinghouse.....0601, 0931, 1081
.....1501, 1521, 1551, 3641, 4731
Yamaha.....0001, 0251, 1221, 1571, 3551
Zenith.....5281, 5271, 0001
.....0061, 0131, 0371, 0681, 0691
.....0931, 0941, 0991, 1011, 1031
.....1081, 1171, 1181, 1191, 1221
.....1251, 1271, 1471, 1631, 1661
.....1751, 1771, 1781, 1791, 2171
.....2291, 3501, 4201, 4321, 4731
.....4751, 4791, 4941, 4991, 5211

TV/VCR COMBOS

Admiral.....0302, 1682
Aiwa.....0312, 0432, 0752
Akai.....0032, 1592
Broksonic.....(0851 & 0462)
.....(0851 & 0892), 0942, 1631
Curtis mathes.....0652, 1522
Daewoo.....(1081 & 0762)
.....(1251 & 0082), 1092
Diamond vision.....(2001 & 0422)
Durabrand.....(2291 & 0182)
Electrohome.....0032, 1592
Emerson.....(0851 & 0462), (0851 & 0892)
.....(1251 & 0082), 0032, 0192
.....0232, 0312, 0332, 0432, 0942
.....1092, 1172, 1432, 1592, 1631
Fisher.....0602, 1712
Funai.....0312, 0432
GE.....1152, 1482
Goldstar.....0312, 0432, 1181
Gradiente.....(2291 & 0182)
Hitachi.....0312, 0432
Infinity.....0622
JVC.....0452, 4201
LG.....0312, 0432, 1181
LXI.....0312, 0432
Magnavox.....0302, 0412, 0622, 1682
Memorex.....0602, 0942, 1631, 1712
Mitsubishi.....0032, 1592
Optimus.....1722, 0122, 1062, 1762
Panasonic.....1722, 0122, 1062, 1762
Philips.....0412, 0622
Philips Magnavox.....0302, 0622, 1682
Quasar.....1722, 0122, 1062
Radio Shack.....0312, 0432, 1152, 1482
RCA.....(1691 & 0242), 1152, 1482
Realistic.....0312, 0432
Samsung.....0652, 1522, 1535, 2141
Sansui.....0942, 1631
Sanyo.....0602, 1712
Sharp.....1682, 0302, 0332
Sony.....0972, 1292, 1652
Sylvania.....0312, 0432
Symphonic.....0312, 0432
Toshiba.....0652, 0902, 1402, 1522
White westinghouse.....(1081 & 0762)
.....0312, 0432
Zenith.....(1081 & 0762)
.....(1251 & 0082), (2291 & 0182)
.....0302, 0312, 0332, 0432
.....0452, 0622, 0652, 0942, 1092
.....1181, 1522, 1631, 1682, 4201

TV/DVD COMBOS

Advent.....1515
Akai.....(3215 & 3285), 4461
Apex.....(0191 & 1245)
Audiovox.....(4031 & 4481)
.....(4051 & 1135), 4521
Axion.....(0881 & 1335)
Broksonic.....0015, 0211
Coby.....3475
Changhong.....(0191 & 1245)

Code List – Lista de Códigos

Classic ....(0191 & 1245)
Daewoo ....(1561 & 0065)
Diamond Vision ....(1611 & 0855)
....(2001 & 0422), 0455
Durabrand....(2291 & 3885), 0205
Emerson 0412, 0445
Funai....0412, 0445
GPX 0135
Haier 0315, 1257
Ilo....(3215 & 3285), 1945
Initial 0994, 1945, 2735
Insignia ....(1241 & 0285), (2891 & 3335)
....0412, 0445, 2805, 2815, 3305
JVC....1685, 3015
Kawasaki 0325
Konka 1425, 1605
Lasonic ....(1611 & 0855)
Liquidvideo ....(0881 & 1335)
Magnavox....0412, 0445
Maxent....3361
Memorex 0015, 0211
Nexxtech 1201, 2005
Panasonic....0552, 0595, 1195, 1346, 3401
Philips....3371
....(1381 & 0702), 0412, 0445, 0795
Piva....1805
Samsung 1535
Sansui....0015, 0211
Sears 0015, 0211
Sharp ....(1291 & 3115)
Sova ....(3631 & 4431)
Supersonic 0135
Sylvania ....(1381 & 0702), 0412, 0445
Symphonic 0412, 0445
Toshiba 0015, 0115, 0211, 3075
Trutech....4551
Westinghouse ....(3711 & 2865)

SAT/CBL

ABC 0004, 0074, 0134
....0464, 0594, 0784, 0794, 1034
ADB 1933
Adelphia....1404
....2023, 0514, 0574, 0744, 1523
ADTH 1393
Akai....1323, 1303
Allegro 0054, 0114
Americast 1594, 0254
Amino 2063
Amplica....0103
Antronix 0264, 0334
Archer....0264, 0334, 0404, 0474, 1044
Arris Gateway 1274
Astro 1273
AT&T 1963
....2093, 0844, 1272, 0514, 0674
Bell....1963, 5491, 2073, 0173
....2083, 2103, 0433, 0903, 0984
Bell Expressvu....0073
....0173, 0343, 0433, 0903
Bell South 0254
Bendbroadband 1244
Bright House....1394, 0694
Buckeye....1233
Cable One....1384
Cabletenna 0264
Cableview 0264
Cablevision 1434
....1404, 0514, 0654, 0694, 1523
Cebride....1374
Century 0474, 1723
Cetomer....0723, 1153
Channel Master 0283, 0393, 0483
Chapparal....0573, 0653
Charter....1304, 1404, 0824
....1523, 0514, 0664, 0684, 0714
Charter Communications 1274
Charter Digital....1264
Cheyenne 0653
Cisco 1444
....1444, 1464, 1474, 1484, 1494
Citizen....0474
Clearmax 1024
Cogeco 1294, 0514
Color Voice 0534, 0604
Comcast 1544, 1554
....1283, 0824, 1404, 0514, 0684
Comtronics 0014, 0084
Contec 0144, 1054
Coolsat 1733, 1913
Cox 0514, 0824
....1324, 1334, 1364, 1404, 1444
....1454, 1464, 1474, 1484, 1494
Cox Digital Cable....1404, 0514, 0734
Digital Music Express 0044
Digital Stream 1203, 1194
Digiwav 1953, 1923
Director 0514
DirecTV....1504, 1514, 0203, 0213, 0233
....0303, 0333, 0353, 0443, 0523
....0553, 0623, 0703, 0793, 0803
....0853, 0873, 0983, 0993, 1073
....1083, 1093, 1103, 1113, 1123
....1133, 1143, 1153, 1163, 1173
....1183, 1193, 1353, 1443, 1513
....1533, 1773, 1783, 1793, 1893
Dish Network....2073
....2083, 1613, 0073, 0173, 0343
....0403, 0433, 0493, 0603, 0783
....0903, 1003, 1013, 1023, 1033
....1043, 1053, 1063, 1503, 1683
Dishpro 0073
....0403, 0493, 0603, 1503, 1683
Drake 0023, 0293, 0733
Dreambox....2113, 2123, 1553
DX Antenna....0383, 0753
Eastern 0214
Echosphere 0433
Echostar 0903
....0073, 0173, 0343, 0403, 0433
....0493, 0603, 0783, 1503, 1683
Emtec 4411, 4441
Entone 2043, 2053
Everquest....0014
Expressvu....0073, 0173, 0343, 0433, 0903
Fortec Star....0083
....0183, 0263, 0373, 0463, 0473
Fujitsu....0673, 0763
Garrard 0474
GC Electronics....0334
GE....0384, 0874, 0333
....0543, 0643, 0723, 0793, 0803
....0873, 1073, 1083, 1373, 1383
Gemini 0123, 0204, 0344
General Instrument(GI) 0013
....0004, 0093, 0163
....0193, 0323, 0453, 0633, 0833
....0893, 0953, 0963, 1573, 1583
....1603, 0044, 0074, 0314, 0374
....0464, 0514, 0594, 0634, 0784
....0794, 0814, 0884, 0894, 1034
Geosatpro....2003
Globecast 0003, 1004
Go Video....1883
Gold Star 0924
Hamlin 0414, 0464, 0484, 0544, 0784
Hitachi 0594, 0303
....0443, 0523, 0623, 1103, 1153
HNS 1153
Hughes 0593, 1343
Hughes Network....0303
....0443, 0523, 0563, 0593
....0703, 1093, 1103, 1153, 1343
Humax 1505
Illico 1354, 1404, 1523
ILO 1035
Insight....1284, 1314
Jasco 0474
Jerrold 0004, 0074, 0194
....0314, 0324, 0444, 0464, 0514
....0594, 0784, 0794, 0814, 1034
JVC....1145, 0433, 0783
Kenwood 0413
Knology 1424, 1344, 1284, 1564
LG....2925, 0303, 1103, 1153
Liteon....1035
Luxor 0503, 1653
Macom 0613

Code List – Lista de Códigos

Magnavox.....0203, 0533, 0783, 0094, 1064
Mediacom.....1284, 1584
Medion.....1035
Memorex 0154
Microyal 1423
Mitsubishi 1534, 0303, 0443
.....0523, 0623, 1093, 1103, 1153
Motorola 0453, 1573
.....1593, 1603, 1863, 0004, 0074
.....0194, 0314, 0374, 0514, 0594
.....0634, 0684, 0794, 0814, 0824
.....0844, 0884, 0894, 0914, 1034
Movie Time.....0224, 1074
Moxi.....1274
NEOSTAT.....1413
NET.....1543, 1713
Norstat.....0683
Novaplex 0834, 0854
Nowtv 1473
NSC 0224, 1074
OAK.....0144, 0354, 1054
Omegasat 1983
Onkyo 1243
Orasat.....1973
Orion.....1523
Pace 1363
.....0053, 0133, 1593, 1673, 0904
Panasonic.....0545, 1272, 0304, 0394, 0954
.....1014, 0213, 0223, 0243, 1353
Pansat 1993, 0033, 0883, 1403
Paragon 0154, 0284
Philips.....0092, 0252, 1052, 1163, 1492
.....1502, 1542, 0094, 0344, 0424
.....0474, 0494, 0554, 1064, 1084
.....1094, 1104, 0203, 0303, 0443
.....0523, 0533, 0623, 0703, 0783
.....1093, 1103, 1153, 1633, 1753
Philips Magnavox 0203
.....0533, 0783, 0064, 0104
Pinnacle.....1493, 1823, 1833
Pioneer 1404, 0532, 0985, 2855
.....1853, 0024, 0274, 0614, 0924
Polaroid 4561
Primestar.....1253, 0323, 0633, 1563, 1573
Prosat 0813, 1333
Proscan 0333, 0643, 0723
.....0803, 0873, 1073, 1083, 1383
Pulsar.....0154
Quasar 0154
Radio Shack 0064, 0104, 0114, 0964
RCA 0244, 0394
.....0474, 1014, 1083, 0333, 0363
.....0543, 0643, 0723, 0793, 0803
.....0873, 1073, 1373, 1383, 1873
RCN 0514, 0824
Realistic.....0334, 0273, 0843, 1643
Regal 0544
Regency 0214
Rembrandt.....0594
ReplayTV 1272
Rogers.....1344, 0174, 1523
Runco 0154
Samsonic.....1433
Samsung 4451, 1213
.....0043, 0233, 0853, 1113, 1123
.....1143, 1763, 0014, 0024, 0924
Scientific Atlanta.....1324
.....1334, 1364, 1404, 1414, 1444
.....1454, 1464, 1474, 1484, 1494
.....0124, 0134, 0164, 0234, 0294
.....0574, 0714, 0804, 0834, 0864
Seiki.....1263
Sharp.....1853
Shaw.....1524, 0514
Sierra I II III.....0653
Signal.....0014
Signature 0594
Sky Network..0053, 0133, 1363, 1593, 1673
.....1743, 1753, 1773, 1783, 1793
SL Marx.....0014
Sonic Blue 1272
Sony 1162, 1302, 2865, 2985, 3055
.....0113, 0353, 0553, 0773, 1893
Sprucer.....0394, 1014
Standard.....0364
Star Sight.....0244, 0863
Star Trak 0423, 0184
Starchoice 0163
.....0323, 0633, 1563, 1573, 1583
Starcom 0314, 0464, 0784
Stargate 0014
STS.....0383, 0583, 0663
Super Guide 0513
Sylvania 1903
Tandy 0434, 0974
Teleview 0014
Telsat 1723
Telus 1943
Texscan 0364
Thomson.....0803, 1753
Time Warner 1254, 1424, 1404
.....0514, 0694, 0724, 0824, 1523
Tivax 1293
Tivo.....0092, 0252, 0353, 0982, 1052
.....1162, 1492, 1502, 1505, 1542
.....1745, 1223, 0704, 0754, 0764
Tocom.....0004
.....0444, 0504, 0634, 0934, 1034
Toshiba 1735, 1745
.....3325, 0154, 0063, 0143, 0303
.....0443, 0523, 0623, 0713, 0743
.....0973, 1093, 1103, 1133, 1153
TV86 .....0224, 1074
TVA 1703
Ultimate TV.....0333, 0553, 0873
Uniden 0693, 0823, 0863
Unika 0264, 0334, 0474
United.....1663
United Cable.....0464, 0784
Universal.....0054, 0264, 0334
.....0404, 0474, 0564, 0944, 1044
Verizon.....2033, 1404, 0514
.....1283, 0174, 0684, 0824, 1523
Video Cipher ii 0023
Video Tech.....0454
Videotron 1404, 1574, 1523
Videoway 0034
Viewsat 1803
Viewstar.....0084, 0094
.....0224, 0434, 0974, 1064, 1074
Visionetics 1483
Visiontec.....1693
Voom 2971
V-Tech.....1813
Web TV 0113, 0783
Zenith.....0114
.....0154, 0474, 0524, 0584, 0624
.....0644, 0023, 0123, 0153, 0253
.....0293, 0313, 0733, 1173, 1593
Zenith Network.....0254
Zinwell 2013

HDTV Set Top Boxes

Apex 2911
Charter 0174, 1523
Directv Models 0703
.....0983, 1443, 1513, 1533
GE HDSTB.....0874
Go Video Hdt100.....2631
Hitachi 61hdx98b 1103, 2661
Hughes Hird E8 0303
.....1103, 1153, 2591, 2651, 2661
Hughes Htl HD.....0303
.....1103, 1153, 2591, 2651, 2661
Insignia 2921
KWorld SA290QE 2931
LG HTL HD 0303
.....1103, 1153, 2591, 2651, 2661
LG LSS 3200a 0303
.....1103, 1153, 2591, 2651, 2661
Mitsubishi SRHD 400 .....1103, 2661
Mitsubishi SRHD 500 .....1103, 2661
Mitsubishi SR HD5 .....1103, 2661
Motorola HDT100 2601
Motorola HRT100 2601
Philco TB100HH9 2941
Philips DSHD800R 1103, 2661
Pioneer SH-D505 2561

Code List – Lista de Códigos

Proscan PSHD105.....0803, 2581
RCA DTA800B1 2951
RCA DTC-100.....0803, 2581
RCA DTC-210.....0803, 2581
RCA HD65W20.....2611
RCA PSHD105 .....0803, 2581
Samsung SIR-T165 .....1143, 2671
Samsung SIR-T351 .....1143, 2671
Samsung SIR-TS160.....1123, 2621
Samsung SIR-TS360.....1123, 2621
Sony SATHD100.....2681
Sony SATHD200.....2681
Sony SATHD300.....2681
Sylvania 6900DTD 2641, 2941
Toshiba DST3100 ....0303, 1153, 2591, 2651
Toshiba DW65x91 ...0303, 1153, 2591, 2651
Toshiba DST3000 .....0303, 1153, 2591
Venturer 1164
Zenith DTV1080.....1173, 2571
Zenith HDSTAT420 .....1173, 2571
Zenith HDSTAT520 .....1173, 2571

DTV

Access HD.....1234
Airlink101.....1174
Alpha Digital 1234
Amtc.....1234
Apex 1114
Artec 1224
Cadence 1214
Channel Master 1204
Coship 1214
Digitalstream.....1194
Dish Network.....0073
Echostar 0073
GE.....0874
Goodmind.....0874
Gridlink 1144
iNet Access 1234
Insignia 1184
Kingbox 1224
Lasonic 1144
Magnavox.....2941
Microgem 1154
Philco.....2941
RCA 1083
Sansonic.....1144
Skardin 1174
Sunkey.....1134
Tivax 1234
Venturer 1164
Winegard 1164
Zenith.....1184
Zentech 1174
Zinwell 1124

STREAMING MEDIA

Apple 5541, 4295
Asus.....1684
Dlink.....1614, 1724
HP.....1624
Iomega.....1744
LG.....1714
Magnavox.....1704
Netgear.....1604, 4475
Niveus.....1634
Philips.....1654
Popcorn Hour.....1664
RCA 1694
Roku 4395, 4355
Seagate 1674
Sling Media.....1644
Vudu 1734
WD.....4345, 4265
X-Box.....4245, 4255

DVD

Acesonic.....3135
Advent 1515
Afreey 0575
Aiwa.....0035, 0195, 0235, 3285, 3565
Allegro 3725, 3885
Ames 1275
AMW.....0645, 0825
Anaba 1375
Apex 0045, 0245
.....0375, 0425, 0615, 0845, 0945
.....0965, 1025, 1065, 1105, 1235
.....1245, 1405, 1675, 3825, 3895
Aspire 1695
Astar 3525
A-Trend 1585
Audiovox.....1335, 3585, 3625
Axion.....1335
B&K 0885
Blaupunkt 1105, 3895
Blue Sky 0215, 0245, 3155
Blue-Ray.....2795, 2965, 2995, 3315
.....3685, 3695, 3705, 3885, 3905
Body Sonic 0575
Bose 4455, 4465, 1475, 3955
Boss 1325
Boston Acoustic 3245
Britania 3675
Broksonic 0015, 0695, 1525, 3495
Cavs 2745
Centrios.....0955, 1335, 1365, 1755, 1765
.....1785, 1795, 1845, 1875, 1895
.....1935, 1975, 2015, 3945, 3965
Cetomer.....0075
Changhong.....1245
Cine Vision.....0205, 3885
Citech 2065
Citizen.....2065
Classic.....1245, 1275, 1965
COBY 3835, 0085, 0245, 0475
.....0485, 0505, 0675, 0835, 2085
.....2095, 2105, 2115, 2125, 2155
.....2655, 2885, 3145, 3265, 3475
Concept.....1105, 3895
Conia 0245
Contel 2915
Criterion.....0785
Curtis International 0835, 1005, 2885
Curtis Mathes 4185
Cyber Home ..4155, 0175, 1015, 1585, 2045
Cyber Vision 3595
Cytron.....0435, 0725
Daewoo 0065, 0345, 1115, 1285, 1385
Denon.....1075, 1265, 3315
Denzel.....0765
Desay.....0865
Diamond Vision 0465, 0855, 1485, 3755
Digitrex 0245
Digix.....0125
Disney.....0795, 3815
Drive 3535
Dual 0005
.....0435, 0515, 0605, 0765, 3035
Durabrand.....0205, 0435, 0955, 2685, 2935
.....3515, 3525, 3885, 3925, 3945
DVD 2000 1415
Dynex 4235, 2455, 2255
Eigervision 3615
Element.....4305
Elta.....0055, 0235
Emerson 0205, 0445, 0795, 0975
.....1185, 3745, 3815, 3855, 3885
Esa.....0515
Escient.....2845
Farenheit.....1205
Fisher.....0405, 2645
Funai.....0445, 0795, 3745, 3815, 3855
GE.....0915, 1105, 3895
Gold Star 0205, 3885
Go Video.....0075, 0255
.....0415, 0565, 0665, 1275
.....1315, 1385, 1495, 3735, 3765
GPX 0135, 0495
Gradiente.....0215, 3635, 3645
Greenhill 1105, 3895
Haaz 1295, 1465
Haier 0315, 4015
Harman/Kardon.....0585
HD-DVD.....2795, 2835, 2965
.....3685, 3695, 3705, 3885, 3905

Code List – Lista de Códigos

Helios.....2275
Hello Kitty.....4195
Hitachi.....0025, 0545
.....0565, 0765, 0925, 1245, 3765
Hiteker.....0245
Humax.....1505
ILO.....1035, 1945, 3285
Infinity.....0575
Initial.....1105, 1945, 2735, 3895, 3935
Insignia.....4205
.....2365, 0975, 0205, 0285, 0445
.....0725, 1105, 1335, 1945, 2195
.....2805, 2815, 2915, 3305, 3335
.....3745, 3785, 3815, 3885, 3895
Integra.....1435
IRT.....2885
ISymphony.....2525
JBL.....0585
JVC.....2385, 2535
.....0155, 0395, 0755, 1145, 1685
.....2025, 2945, 3015, 3795, 3805
Jwin.....0275, 1065, 1655, 3275
Kawasaki.....0325, 0955, 3945
Kenwood.....0935, 1075
Kiss.....0765
KLH.....0375, 0465, 1105, 3895
Konka.....0285, 1085, 1255, 1425, 1605
Koss.....0215, 0725
KXD.....0085, 2885
Lasonic.....0855, 1295, 2825
Lenoxx.....0235, 1345, 3515, 3525
LG.....4285, 2335
.....2555, 2565, 2635, 0205, 0635
.....1565, 2925, 3785, 3885, 3915
Linn.....1635, 2955
Liquid Video.....1335
Liteon.....0805, 1035, 1495, 1575, 1905
Magnavox.....2425, 4105, 0975
.....0105, 0295, 0445, 0735, 0745
.....1045, 1055, 1225, 1395, 2945
.....3025, 3715, 3745, 3795, 3815
Marantz.....4105, 0205, 0735, 0745
.....1395, 1615, 2945, 3795, 3885
Maxent.....1665, 1685, 3015
Medion.....0435
.....0455, 1035, 1325, 1665, 3755
Memorex.....2375
.....0435, 1925, 2755, 3125, 3495
Meridian.....0735, 3795
Microsoft.....0915, 3255
Microvision.....1325
Mintek.....1105, 3895
Mitsubishi.....2585, 1415, 3895
Mustek.....1275
Myron&Davis.....1555
NAD.....0205, 1625, 3295, 3885
Nakamichi.....1445
NEC.....3885
Nesa.....1105, 1555, 3895
Nexxtech.....0125, 0145, 0335, 0515, 0725
.....0955, 1025, 1545, 1755, 1765
.....1785, 1815, 1835, 2005, 2055
.....2915, 3505, 3825, 3945, 3965
Norcent.....0305, 0485, 0655, 0835, 1575
Onkyo.....2355
.....2505, 0355, 1435, 3795, 3985
Optimus.....0025, 1245, 2975
Orion.....0015, 3495
Oritron.....0215, 1935
Pacific.....0435
Panasonic.....4175
.....2395, 2595, 2605, 0165, 0385
.....0545, 0595, 1075, 1195, 1215
.....2965, 3105, 3775, 3975, 4005
Philco.....3605
Philips.....2415
.....2615, 2625, 4105, 0745, 0105
.....0265, 0445, 0735, 0795, 1045
.....1055, 1225, 1395, 1615, 2665
.....2705, 2765, 2775, 2945, 3165
.....3705, 3715, 3745, 3795, 3815
Philips Magnavox.....4105, 0735, 0745
.....1055, 1225, 1615, 2945, 3795
Pioneer.....0025, 0525, 0705, 0875, 0985
.....1245, 1595, 1775, 2675, 2695
.....2855, 2895, 2975, 3695, 3905
Piva.....1805
Polaroid.....0185
.....0685, 1025, 1485, 3665, 3825
Polk Audio.....4105
.....0735, 0745, 1395, 2945, 3795
Portland.....0235, 1545
Power Acoustik.....3575
Proline.....0215
Proscan.....0915, 1135
Prosonic.....0485
Protron.....0305
Pyle.....2515, 1155
Radio Shack.....0955
.....0995, 1165, 1645, 2905, 3945
RCA.....2465, 0215
.....0915, 0955, 1105, 1135, 1165
.....1645, 2755, 2905, 3895, 3945
Regent.....1345, 3925
Reoc.....1295
RIO.....0205, 3885
RJ Technology.....1825, 2715
Rosen.....1175, 3035
Rotel.....0395
Saba.....0995
Sampo.....0575
Samsung.....4125, 2285, 2325, 2345
.....2485, 4095, 0075, 0255, 0565
.....1305, 1535, 1725, 2185, 2725
.....2995, 3085, 3555, 3765, 3865
Sansui.....0015, 0695, 3495
Sanyo.....2495, 0095, 0405, 2205, 2215
.....2225, 2235, 2245, 2645, 3945
Sears.....0015, 0445, 3495, 3745
Seg.....0765
Selectron.....1855, 1885, 1915
.....1955, 1995, 2035, 2075, 2875
Semp.....0725
Sensory Science.....1495
Sharp.....4115
.....4315, 4325, 4335, 2315, 2445
.....0555, 0625, 0815, 2795, 3115
Sherwood.....4225, 0225
Shinco.....1105, 3895
Shinsonic.....1105, 3895
Sonic Blue.....0665
Sony.....4165
.....4275, 2305, 0365, 0535, 0715
.....0725, 0895, 0905, 2165, 2865
.....2985, 3055, 3685, 3825, 3995
Soundstorm.....1155, 1325
Sova.....3545
Spectroni.....2575
Sungale.....0675, 1715
Superscan.....0445, 3745
Supersonic.....0135
SV2000.....0445, 3745
SVA.....0245, 0815
Sylvania.....4215, 2405, 0445
.....0795, 3745, 3815, 3855, 3875
Symphonic.....0445
.....0795, 0975, 3745, 3815, 3855
Tascam.....0395
TCL.....2435
Teac.....0025, 0955, 1245, 3885, 3945
Technics.....1075
Techwood.....1625, 1985, 2945, 3845
Terapin.....1705
Tevion.....0435, 0605
.....0725, 0785, 1125, 1295, 1465
Theta Digital.....0025, 1245
Tivo.....0985, 1505
Toshiba.....4145, 2295, 2475
.....2545, 0015, 0115, 0735, 1735
.....1745, 2135, 2145, 2175, 2835
.....3065, 3075, 3325, 3495, 3795
Tredex.....1355
Trutech.....1385, 2045, 3655
United.....0955, 3945
Venturer.....0955, 3065, 3945
Vizio.....4135, 4405
.....4415, 4425, 4435, 4445, 2265
Westinghouse.....2865
Wharfedale.....0575, 1455
White Westinghouse.....0795, 3815

Code List – Lista de Códigos

X-Box....4245, 4255, 0915
Xenius....0725
Yamaha....4105, 0745, 1055, 1075
....1095, 1225, 2785, 2945, 3005
Yamakawa....0765, 0775, 1865
Zenith....0205, 0635, 3785, 3795, 3885

Blu-Ray-DVD

Denon....4035
Dynex....4235
HP....4085
Insignia....4205, 0975, 2635
JVC....2385
LG....4285, 2635, 2335
Magnavox....2425
Memorex....2375
Onkyo....2355
Oppo....4365, 4375, 4385, 4045
Panasonic....4175, 2395
Philips....2415
Pioneer....4055
Samsung....4125, 2325, 2345, 4095
Sharp....4115, 2315
Sherwood....4225, 4065
Sony....4165, 4275, 2305
Sylvania....4215, 2405
TCL....2435
Toshiba....2295
Vizio....4135, 4025
Yamaha....4075

DVD-R

Apex....0845
Aspire....1695
Astar....2885
Broksonic....0695
Centrios....1365, 1935, 1975
Coby....2885
Cyberhome....1015
Emerson....1612
Funai....0412
Go-Video....1275, 1315, 1495
Hitachi....0545, 0925
Humax....1505
Ilo....1035
Insignia....0562
JVC....1145, 2025
KXD....2885
LG....0562
Liteon....0805, 1035, 1495
Magnavox....1055, 1225, 3025
Medion....1035, 1665
Memorex....1925, 3125
Mustek....1275
Oritron....1935
Panasonic....0545
Philips....1055, 1225, 2705, 3165
Philips-Magnavox....1055, 1225
Pioneer....0985, 2695, 2855
Polaroid....0185
RCA....0915
Samsung....1305, 4451
Sanyo....0095
Selectron....1955
Sharp....0625
Sony....2865, 2985, 3055
Sylvania....1612, 1672
Symphonic....1612
Toshiba....0682, 1735, 3325
Trutech....2045
Yamaha....1055, 1225
Zenith....0562

DVD/VCR COMBOS

Allegro....(3885 & 0182)
Apex....0852, 1025
Broksonic....0015, 0211, 0695
Cinevision....(0205 & 0182)
Daewoo....1385
Diamond Vision....0422, 0455
Durabrand....(0205 & 0182)
Emerson....(0702 & 0312)
....0412, 0432, 0445, 0795
Fisher....(0405 & 0472)
Funai....(0702 & 0312)
....0412, 0432, 0445, 0795
Go-Video....0255
....0402, 0415, 0542, 0565, 1385
Hitachi....(0925 & 0432)
Insignia....(0205 & 0182), 0562
JVC....0692, 0755, 1145, 2025
LG....0562, 0635
Liteon....1905
Magnavox....(0105 & 1642)
....0342, 0412, 0445, 1045
Medion....0422, 0455
Nexxtech....(0486 & 0492)
....0852, 0955, 1025, 2055
Panasonic....0552, 0595
Philips....(0105 & 1642)
....0342, 0412, 0445, 1045, 1372
Pioneer....1775, 2695
Polaroid....0852, 1025
RCA....(0915 & 0162)
Rio....(0205 & 0182)
Samsung....0255, 1662, 1725
Sansui....0015, 0211, 0695
Sanyo....(0405 & 0472)
Sears....0015, 0211
Sony....0832
Sylvania....(0702 & 0312)
....(0702 & 1392), 0312, 0412
....0432, 0445, 0795, 1612, 1672
Symphonic....(0702 & 0312)
....(1612 & 1392), 0312
....0412, 0432, 0445, 0795, 0975
Techwood....1602, 1985
Toshiba....0115, 0682, 0735, 3075
Trutech....1385
White Westinghouse....(0795 & 0432)
Zenith....(0205 & 0182)

VCR

Accele....0102
Admiral....0302, 1682
Adventura....0992
Aiko....0082, 1092
Aiwa....0182, 0312, 0432, 0752, 0992
Akai....0312
....1362, 0032, 0432, 0502, 0582
....0712, 0872, 0982, 1212, 1592
Allegro....0182
....0452, 0792, 1182, 1732, 4201
American High....1112
Apex....0852
Asha....0102
AT & T....1272
Audio Dynamics....0012, 0392, 0522, 0532
Audiovox....0182
Beaumark....0102
Bell & Howell....0602, 1712
Broksonic....0132, 0211
....0322, 0442, 0462, 0572, 0695
....0772, 0892, 0942, 1562, 1631
Calix....0182
Candle....0012
....0022, 0102, 0182, 0882, 1082
Cannon....0162, 0802, 1112
Canon....0162, 1112, 1552
Capehart....0792
Carver....0482
CCE....0082, 0362, 0372, 1092
Cine Vision....0182, 1732
Citizen....0012, 0022, 0082
....0102, 0182, 0882, 1082, 1092
Colortyme....0012
Colt....0362, 0372
Craig....0102, 0182, 0362, 0372, 0592
Curtis Mathes....0012, 0082
....0102, 0162, 0312, 0432, 0482
....0652, 0732, 1112, 1472, 1522
Cybernex....0102
Daewoo....0022, 0082, 0762, 0882, 0892
....0992, 1082, 1092, 1385, 1472
DBX....0012, 0392

Code List – Lista de Códigos

Denon 0222
Diamond Vision 0422
Dimensia 0162
Durabrand 0182, 1732
Dynatech 0312, 0432, 0992
Electrohome 0032, 0182, 1592
Electrophonic 0182
Emerson 0032, 0082, 0102, 0182, 0192
..... 0232, 0312, 0322, 0332, 0412
..... 0432, 0442, 0462, 0602, 0702
..... 0732, 0742, 0752, 0772, 0882
..... 0892, 0912, 0922, 0942, 0952
..... 0982, 0992, 1012, 1032, 1092
..... 1102, 1112, 1172, 1192, 1422
..... 1432, 1562, 1592, 1631, 1712
Fisher 0012
..... 0042, 0052, 0472, 0482, 0592
..... 0602, 1202, 1442, 1712, 2645
Fuji 0712, 1112
Funai 0312, 0412, 0432, 0702, 0992
Garrard 0992
GE 0102, 0162, 0242, 0612
..... 1022, 1112, 1152, 1482, 1702
Gold Star 0012, 0182
..... 0312, 0432, 0792, 1181, 1632
Go Video 0102, 0255, 0272, 0292, 0402
..... 0542, 0662, 1385, 1532, 1692
Gradiente 0182, 0992
Harley-Davidson 0992
Harman/Kardon 0012, 0032, 1592
Harwood 0362, 0372
Headquarter 0432
..... 0512, 0602, 1142, 1212, 1712
HL-Q 0592
Hitachi 0312
..... 0512, 0812, 0925, 1142, 1212
Infinity 0622
Insignia 0182, 0562, 1732
Instant Replay 0312, 0432, 1112
Inteq 0182
JC Penney 0012, 0102, 0162, 0182
..... 0392, 0522, 0532, 0602, 0812
..... 1112, 1142, 1212, 1242, 1712
JCL 1112
Jensen 0812, 1212
JVC 0012
..... 0392, 0452, 0522, 0532, 0602
..... 0692, 1212, 1712, 2025, 4201
Kenwood 0012, 0392
..... 0522, 0532, 0602, 1212, 1712
KLH 0362, 0372
Kodak 0182, 1112
LG 0312, 0432, 0562, 0792, 1181
Liteon 1905
Lloyd 0312, 0432, 0992
Logik 0362, 0372
LXI 0182, 0312, 0432
Magnavox 0105
..... 0142, 0162, 0172, 0302, 0312
..... 0342, 0412, 0432, 0482, 0622
..... 0792, 0862, 1112, 1642, 1682
Magnin 0102
Marantz 0012
..... 0392, 0482, 0522, 0532, 0602
..... 0772, 0802, 1112, 1552, 1712
Marta 0182
Matsushita 1112
Medion 0422
MEI 1112
Memorex 0052, 0102
..... 0182, 0302, 0312, 0432, 0482
..... 0502, 0592, 0602, 0792, 0942
..... 0992, 1112, 1631, 1682, 1712
MGA 0032, 0922, 1592
MGN Technology 0102
Midland 0612
Minolta 0812, 1142
Mitsubishi 0032, 0202, 0392, 0522
..... 0532, 0632, 0812, 0922, 1592
Montgomery Ward 1162, 0302, 0932
Motorola 1742, 0302, 1112, 1682
MTC 0102, 0312, 0432, 0992
Multitech 0102, 0312
..... 0362, 0372, 0432, 0612, 0992
NEC 0012
..... 0392, 0522, 0532, 0602, 0732
..... 0772, 1012, 1122, 1212, 1712
Nexxtech 0486, 0492, 0842, 0852, 2055
Nikko 0182
Noblex 0102
Olympus 1112
Onkyo 1382
Optimus 0102, 0122, 0182, 0302, 0722
..... 1042, 1062, 1262, 1682, 1722
Optonica 0102, 0932
Orion 0322, 0942, 1562, 1631
Panasonic(National) 0122, 0162, 0552, 1062
..... 1112, 1262, 1272, 1642, 1722
Pentax 0012, 0812, 1142
Philco 0162, 0172, 0482, 1112
Philips 1352, 1372, 0092, 0105
..... 0252, 0342, 0412, 0482, 0622
..... 0672, 1052, 1112, 1282, 1642
Philips Magnavox 0302, 0482, 0622, 1682
Pilot 0182
Pioneer 0222, 0392
..... 0522, 0532, 0812, 1242, 2695
Polaroid 0852
Portland 0022, 1082
Proscan 0162, 0642
Protec 0362, 0372
Pulsar 0792
Quarter 0602, 1712
Quartz 0602, 1712
Quasar 0122, 0162
..... 1062, 1112, 1262, 1642, 1722
Radio Shack 0032, 0042
..... 0102, 0162, 0182, 0302, 0312
..... 0432, 0502, 0592, 0602, 0722
..... 0932, 0992, 1042, 1112, 1152
..... 1262, 1482, 1592, 1682, 1712
Radix 0182
Randex 0182
RCA 0062, 0102, 0162
..... 0182, 0212, 0242, 0352, 0582
..... 0612, 0642, 0782, 0812, 0915
..... 1022, 1112, 1132, 1142, 1152
..... 1222, 1452, 1482, 1572, 1702
Realistic 0032, 0042, 0102, 0162
..... 0182, 0302, 0312, 0432, 0502
..... 0592, 0602, 0932, 0992, 1042
..... 1112, 1262, 1592, 1682, 1712
ReplayTV 1272
Ricoh 1252
Rio 0182, 0282, 1732
Runco 0792
Samsung 0102
..... 0255, 0292, 0502, 0652, 0812
..... 0872, 0882, 1522, 1535, 1662
Samtron 1692
Sanky 0302, 0792, 1682
Sansui 0132, 0211
..... 0322, 0392, 0522, 0532, 0572
..... 0695, 0942, 1212, 1562, 1631
Sanyo 0052, 0102
..... 0472, 0592, 0602, 1072, 1322
..... 1332, 1342, 1442, 1712, 2645
Scott 0442, 0462, 0882
..... 0892, 0922, 1032, 1192, 1422
Sears 0042, 0132, 0182, 0211, 0412
..... 0482, 0592, 0602, 0812, 1112
..... 1142, 1202, 1242, 1262, 1712
Sharp 0032
..... 0302, 0312, 0332, 0432, 0932
..... 0962, 1042, 1082, 1592, 1682
Shintom 0362, 0372
..... 0522, 0712, 0812, 1252, 1512
Shogun 0102
Signature 0312, 0432
Singer 0362, 0372, 1112
Sonic Blue 1272
Sony 0072, 0112, 0262, 0382
..... 0712, 0822, 0832, 0972, 1006
..... 1162, 1232, 1252, 1582, 1652
STS 0812, 1112, 1142
Superscan 0412
Sylvania 0162, 0312
..... 0412, 0432, 0482, 0702, 0922
..... 0992, 1112, 1392, 1612, 1672
Symphonic 0312, 0412

Code List – Lista de Códigos

.....0432, 0702, 0992, 1392, 1612
Tandy.....0312, 0432, 0602, 1712
Tashiko.....0182
Tatung.....1212
Teac.....0312, 0432, 0992, 1212
Technics.....1112
Techwood.....1602
Teknika.....0182
.....0232, 0312, 0432, 0992, 1112
Tivo.....1052, 1162
TMK.....0102, 0732, 1012
Toshiba.....0042
.....0152, 0482, 0652, 0682, 0812
.....0882, 0902, 0922, 1002, 1032
.....1312, 1402, 1412, 1522, 3075
Totevision.....0102, 0182
Trutech.....1385
Unitech.....0102
Vector Research.....0012
.....0392, 0522, 0532, 0882
Victor.....0392, 0522, 0532
Video Concepts.....0012, 0032
.....0392, 0522, 0532, 0882, 1592
Videosonic.....0102
Wards.....0032, 0102, 0162, 0182, 0302
.....0312, 0362, 0372, 0432, 0592
.....0812, 0882, 0932, 0992, 1032
.....1112, 1142, 1462, 1592, 1682
White Westinghouse0312, 0432, 0702, 0762
XR-1000.....0362, 0372, 0992, 1112
Yamaha.....0012, 0392, 0522, 0532, 1212
Zenith.....0082, 0182, 0302, 0312
.....0332, 0392, 0432, 0452, 0512
.....0522, 0532, 0622, 0652, 0662
.....0712, 0762, 0792, 0942, 1072
.....1092, 1181, 1182, 1252, 1522
.....1532, 1631, 1682, 1732, 4201

LASER DISC

Denon.....0222
Pioneer.....0222
Proscan.....0642
RCA.....0642
Sanyo.....1072
Sony.....1006, 1232
Zenith.....1072, 1232

CD

ADC.....0517, 1277
Adcom.....0027, 0777
Aiwa.....0357, 0966, 0987, 1007
Akai.....0167, 0377, 0757
Audio Technica.....0117
California Audio Labs.....0257
Captronic.....0527, 1623
Carver.....0197, 0207, 0317, 0417
Casio.....0397
Centrios.....1097
Citizen.....0277
Coby.....1287
Curtis Mathes.....0397
Denon.....0637
Emerson.....0777, 1017
Fisher.....0127, 0217
.....0317, 0327, 0457, 1137, 1157
Genexxa.....0427, 0577, 1017
Goldstar.....0687
Harmon Kardon.....0647, 0797
Hitachi.....0427
Inkel.....0787
Insignia.....1526
JC Penny.....0397, 0657
JVC.....0897, 1056, 1107
Kenwood.....0137, 0367, 0467, 0497
.....0537, 1016, 1027, 1147, 1167
Krell.....0207
Kyocera.....0517, 1277
Luxman.....0227, 0337, 0477, 0587
LXI.....0397
Magnavox.....0207, 0737, 0837
Marantz.....0207, 0437, 0547, 0947
MCS.....0397, 0657
MGA.....0797
Mission.....0207
Mitsubishi.....0797, 0907
NAD.....0766, 0827, 1026, 1087
Nakamichi.....0007, 0877, 1037
NEC.....0657
Nexxtech.....0097, 0487, 0536
.....0576, 0607, 0617, 0666, 0727
.....0856, 0887, 0916, 0967, 1217
Nikko.....0117, 0217, 1017
NSM.....0207
Onkyo.....0147
.....0237, 0816, 0867, 0937, 1177
Optimus.....0057, 0317
.....0347, 0387, 0417, 0427, 0447
.....0537, 0557, 0667, 0776, 0857
Panasonic.....0257
.....0696, 0707, 0747, 0997, 1077
Philips.....0197, 0207, 0837
Pioneer.....0057, 0307, 0407, 0427
.....0577, 0717, 0807, 0917, 1227
Proton.....0207
Quasar.....0257
Radio Shack.....0107, 0247, 0267
.....0307, 0417, 0507, 0717, 1227
RCA.....0087, 0107
.....0187, 0307, 0317, 0717, 0777
.....1047, 1067, 1117, 1207, 1227
Realistic.....0317, 0347, 0427, 0527
.....0547, 0557, 0777, 1017, 1623
Rotel.....0207
SAE.....0207
Samsung.....0847, 1396
Sansui.....0017, 0047, 0207, 1067
Sanyo.....0157, 0177
.....0317, 0457, 0957, 1127, 1197
Scott.....0777, 1017
Sears.....0397, 0537, 0547
Sharp.....0537, 0547
Sherwood.....0247
.....0447, 0547, 0606, 0627, 0787
Shure.....0657
Sony.....0077, 0357, 0737, 0977
STS.....0517, 1277
Sylvania.....0207
Symphonic.....0567
Teac.....0217, 0297, 0547, 0557
.....0567, 0646, 0677, 0817, 1187
Technics.....0257, 0696, 0747, 0997, 1077
Theta Digital.....0837
Toshiba.....0766, 0827
Victor.....0897
Yamaha.....0037, 0117, 0287, 0927, 1057
Zenith.....0067, 0217, 0516
.....0597, 0656, 0697, 0716, 0767

AUDIO

Aiwa.....0586
.....0726, 0846, 0966, 1296, 1386
Apex.....0425
Apple Ipod.....0186
Bose.....0886, 1237, 1606
Carver.....0197
Centrios.....1116, 1217, 1546, 1552, 1566
Citizen.....0277
Criterion.....0785
Delphi.....0376
Denon.....0316, 0976, 1046, 1136
Duraband.....1476
Fisher.....0026, 0826
Gold Star.....0216
Harman/Kardon.....0016, 0436
Insignia.....0725
Ipod.....0066
JVC.....0566, 0676, 1056
JWL.....1126
Kenwood.....0246, 0426, 0497
.....0616, 0956, 1016, 1416, 1596
Koda.....1552
Koss.....0215
Magnavox.....0026, 0206, 0226, 0295, 1266
Marantz.....0036, 0437
Mitsubishi.....0366

Code List – Lista de Códigos

NAD 0496, 0766, 1026
Nelson 1217
NEO 0076
Nexxtech 0487, 0536, 0576, 0666
..... 0725, 0856, 0916, 1116, 1217
Norcent 0835
Onkyo 1186, 1246, 1256
..... 0116, 0816, 0936, 0996, 1376
Optimus 0006, 0317, 0386, 0387, 0506
..... 0776, 0896, 1036, 1446, 1486
Panasonic 1206, 1236, 0056
..... 0126, 0686, 0746, 0796, 0876
..... 1066, 1096, 1346, 1436, 1466
Philips 1196, 0026, 0036
..... 0197, 0265, 1066, 1266, 1576
Pioneer 0266, 0356
..... 0407, 0476, 0776, 0896, 1106
..... 1406, 1446, 1496, 1506, 2675
Radio Shack 0006
..... 0166, 0176, 0236, 0247, 0266
..... 0356, 0476, 0507, 0626, 1036
..... 1316, 1406, 1446, 1486, 1506
RCA 0146, 0176, 0196, 0266, 0276
..... 0326, 0356, 0476, 0486, 0626
..... 0736, 0786, 0866, 0906, 0986
..... 1165, 1207, 1276, 1286, 1306
..... 1316, 1326, 1336, 1406, 1506
Realistic 0946
Regent 1476
Rio 3885, 0286
Saba 0995
Samsung 0075
Sanyo 0157, 1156, 1166, 1176
Scott 0396
Sharp 1616
..... 1626, 1216, 0556, 0756, 1267
Sherwood 0236, 0247, 0466, 0606
Sirius 1247, 1267
Skyfi 0076
Sony 1226, 0046
..... 0106, 0136, 0256, 0296, 0406
..... 0416, 0526, 0546, 0636, 1006
..... 1076, 1086, 1426, 1456, 1586
TAO 0076
Teac 0156, 0297, 0306, 0346, 0646
Technics 0056, 0126, 0686
..... 0696, 0796, 1066, 1096, 1436
Tevion 0785
Venturer 0086
Vizio 1636, 1646
Wonder 1566
XM Radio 0076, 0376
Yamaha 0076, 0287
..... 0336, 0446, 0456, 0596, 0706
..... 0806, 0836, 0926, 1146, 1536
Zenith 3885
..... 0026, 0067, 0096, 0216, 0217
..... 0286, 0506, 0516, 0656, 0716

HOME AUTOMATION

GE Homeminder 0008
Lutron 1516
X10 Home Automation 0018
X10 NEC 0028
Vizio 0068

MEDIA CENTER PC
MCE 3255
Microsoft 3255
Vista 3255

HTIB
(HOME THEATER IN A BOX)

Aiwa ..... (0586 & 0035)
Amw 0825

Apex 0425
Bose 4455, 0886, 1475
Boston Acoustic 3245
Centrios 0486, 0955, 1116, 1785, 1845
Classic 1965
Criterion 0785
Durabrand 3885, 0205
..... 0486, 0955, 1476, 2685, 2935
Dynex 0038
Emerson 1185
Insignia 0725
JVC 0155
KLH 0465
Koss 0215
Lenoxx 1345
LG 4285, 1463, 1565
Magnavox ..... (0105 & 1266), (2945 & 1266)
..... 0206, 0295, 0745, 1045
Myron & Davis 1555
NESA 1555
Nexxtech 0486, 0725, 0955, 1116, 1785
Norcent 0835
Onkyo 0048, 0058, 0355, 1376
Panasonic 0165, 1466
Philips ..... (0105 & 1266)
..... (2665 & 1266), (2945 & 1576)
..... 0206, 0265, 1045, 2765
Pioneer ..... (2675 & 1496), 0525, 0875, 2895
Radio Shack ..... (0003 & 1316)
..... 0085, 0275, 0486
..... 0626, 0955, 0995, 1165, 1645
RCA ..... (0003& 1316)
..... 0486, 0626, 0955, 1165, 1645
Regent 1345, 1476
Rio ..... (0205 & 0286)
Saba 0995
Samsung 0075, 1535, 2725
Selectron 1885, 2075
Sony 0365, 1426
Techwood 1602, 1985
Tevion 0785
Zenith ..... (0205 & 0286)

TV/VCR/DVD COMBO

Broksonic 1525
Diamond Vision ..... (2001 & 0422), 0455
Magnavox 0445, 0412
Panasonic 0595, 0552
Philips 0445, 0412
Samsung 1535
Sears 0445, 0412
Superscan 0445, 0412
Sylvania 0445, 0412
Toshiba 0115, 3075

Model:
ONB13AV0047252
Manual Version 1
Updated: 03/28/14